

# PROGRAMMABLE DISPLAY FUNCTIONS

Refs: FX8 & FX10

/

## Setting of the functions programmable

| <p><b>To adjust some functions of your scooter, you must enter in the settings of the display. For walk in them setting of your display :</b></p> <p>Press in same time on them buttons ON/OFF and M located on the display.<br/>A time that the menu poster a P (Setting) with a digit, click on the button ON/OFF for to change parameter. For edit the given, press on M</p> |   | Values by default        |                          |                          |                          |
|---|---|--------------------------|--------------------------|--------------------------|--------------------------|
|   |   | SPEED<br>Ref .<br>FX8    |                          | MAX<br>Ref . FX10        |                          |
|   |   | G1<br>Until May<br>2020* | G2<br>Since May<br>2020* | G1<br>Until May<br>2020* | G2<br>Since May<br>2020* |
| <b>P02 : Unity of distance</b>  | 0 = Kilometers<br>1 = miles   | 0                        | 0                        | 0                        | 0                        |
| <b>P04 : bet in standby of the scooter after a certain time of inactivity</b>   | 0 = The scooter don't put never in standby<br>Of 1 at 60 for the time elapsed before the bet in standby<br>unit is the minute : 1 = 1 minute, 60 = 60 minutes before the bet in standby of the scooter  | 3                        | 3                        | 3                        | 3                        |
| <b>P09 : Startup at the stop Where after have spear the scooter</b>   | 0 - Startup at the stop<br>1- You must first of all throw the scooter before of power utilize the trigger acceleration  | 0                        | 1                        | 0                        | 1                        |
| <b>P12 : Powerful from engine to startup of the scooter</b>   | 0 = Couple to startup very weak 1 =<br>Couple to startup weak<br>2 = Average starting torque 3 =<br>Couple to startup strong<br>4 = Very high starting torque 5 =<br>Couple to powerful startup   | 5                        | 5                        | 5                        | 5                        |
| <b>P16 : Regulator of speed</b>   | After have supported on the trigger and have achieved the speed desired,<br>hold it during 5 seconds. The scooter may keep this speed same if you withdraw your<br>finger. For disable the regulator, accelerate Where brake the scooter<br>1 = Function activated<br>0 = Function disabled | 0                        | 0                        | 0                        | 0                        |
| <b>P99 : Reset factory of the display</b>   | Reset complete<br>Press at length on the function FASHION during 5 at 6 seconds in interface P99 All them<br>settings will be rules on them settings original   |                          |                          |                          |                          |

Be careful, these manipulations must be done with care because they affect the internal settings of the scooter.  
The other parameters MUST NOT be modified under any circumstances under the risk of disrupting the complete configuration of the scooter

\* Attention, he is of the date of production and Nope of the date of marketing who may vary to several month according to the delay of storage.