



Creation date	05/07/2021	Recommended tools
Date Last modified	06/07/2021	Video link
No TUTO sheet	FX1_T01_V1_050720 21	
Completion time	/	

Products concerned

Range : References _ : FX1L4 and FX1L5

PROGRAMMABLE FUNCTIONS DISPLAY

For adjust some functions of your scooter, you must walk in in them setting of the display.

To enter the parameters of your display :

Press in same time on them buttons + and - located on the display.

Click briefly on + and - for to change of fashion

Values by default

1 : Setting of the brightness	1 = Dark 2 = Light 3 : = Very light	3
2 : Fashion of speed	0 = km/h 1 = pm /h	0
3: Setting standby	0 = The scooter don't put never in standby Of 1 at 60 for the time elapsed before the bet in standby unit is the minute : 1 = 1 minute, 60 = 60 minutes before the bet in standby of the scooter	10
4 : Fashion of startup	0 = Startup at the stop 1 = You must first of all throw the scooter before of power utilize the trigger acceleration	1
5 : Regulator of speed	1 = Enabled 2 = Disabled	2
6 : Reset	Reset complete Press at length on the button + during 5 at 6 seconds in interface All them settings will be rules on them settings original	

Be careful, these manipulations must be done with care because they affect the internal settings of the scooter.

The other parameters MUST NOT be modified under any circumstances under the risk of disrupting the complete configuration of the scooter



IXIT Beeper • 228 Rue de l'ancienne distillerie • 69400 • Gleizé • FRANCE

Tel : 04 74 02 97 97

contact@beeper.fr

www.beeper.fr